


Water Reservoir Grommet

- 1) Unplug the machine.
- 2) Remove the water tank.
- 3) Under the water tank you will see an inlet valve similar to the one pictured below. (Your inlet may be recessed into the base of the machine.

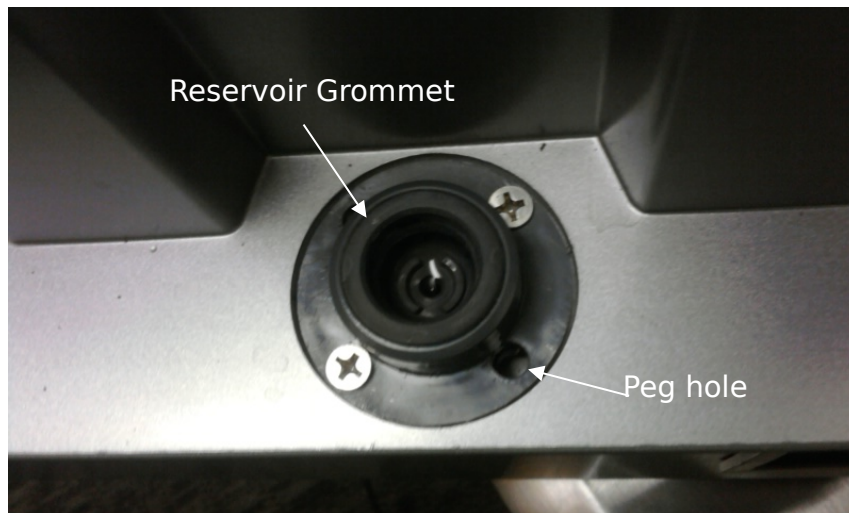

- 4) The cap or outer covering of the inlet valve is removable. You do not need to unscrew anything. Use a small screw driver to pry up on the inlet valve cap. It is held on by 2-3 pegs. It should come off very easily.
- 5) Under the cap, you will find the grommet. It is pictured below.



- 6) Pull the grommet up with your fingers. It is resting in the lower part of the inlet valve.
- 7) Clean the area with some warm water and a sponge.
- 8) Insert your new grommet just like the picture above.
- 9) Re-install the cap by pushing it back in place until it is secure.