

IMPRESSA XJ9 Professional

Descaling the machine

Approximate duration 50 min.

Equipment required:

Descaling tablets

Tub of 36 (Art. 70751)

Pack of 3 (Art. 61848)




These short instructions do not replace the 'IMPRESSA XJ9 Professional Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.


Precondition: »Please select product:«





»Maintenance status (1/6)«

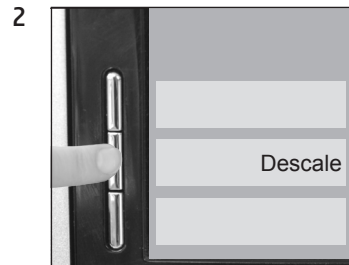




»Descale«

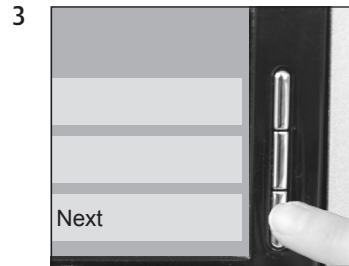


»Empty drip tray.«

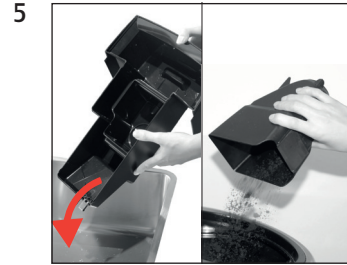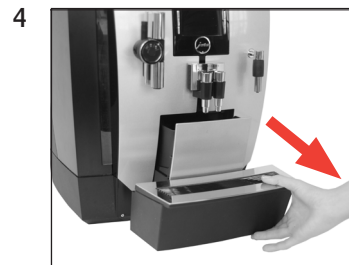



»Pour descaling agent into water tank.«

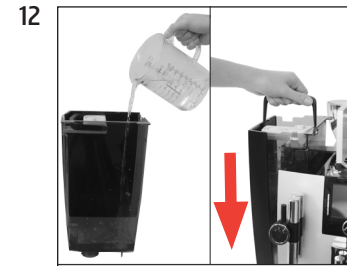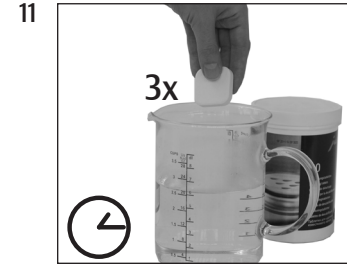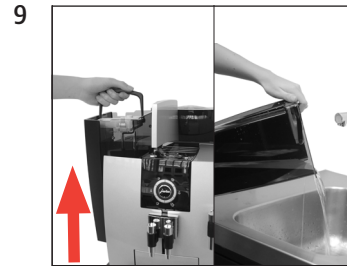



»Please press the Rotary Switch«

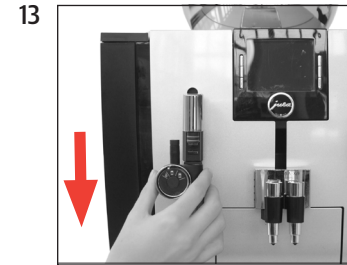


»Machine is being descaled.«
»Empty drip tray.«

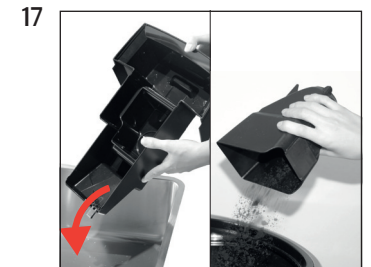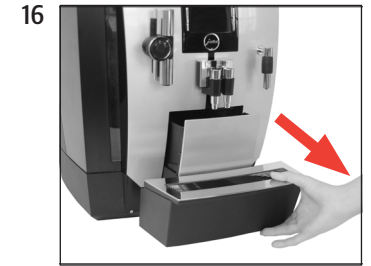


»Fill water tank.«

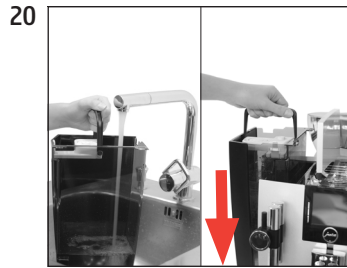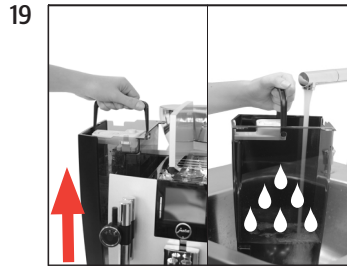

»Please press the Rotary Switch«

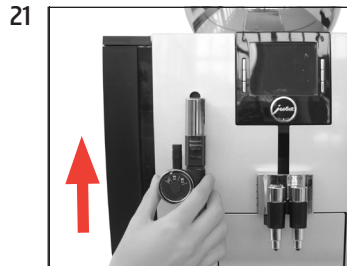

»Machine is being descaled.«
»Machine is heating.«
»Machine is rinsing.«
»Empty drip tray.«

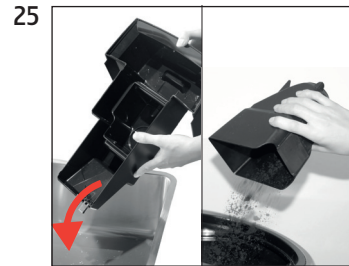

»Please select product:«