

CONTROL PANEL DISPLAY

Ready Signals




- The machine is ready for brewing coffee from bean and hot water dispensing.




- The machine is in the steam dispensing phase.



- The machine is in the hot water dispensing phase.

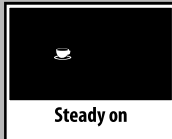

- The machine is brewing 1 espresso coffee or a long coffee.

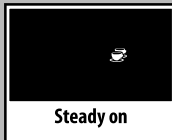

- The machine is brewing 2 espresso coffees or 2 long coffees.



- The machine is programming the amount of coffee to be brewed each time the "☕" or "☕" button is pressed.

Warning Signals




- The machine is warming up to brew coffee and dispense hot water and steam.



- The machine is performing the rinse cycle. Wait until the machine stops the operation.




- The machine needs a descaling cycle.

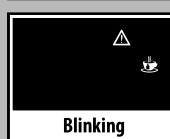

- The machine needs water circuit priming.



- The machine is warming up to dispense steam.

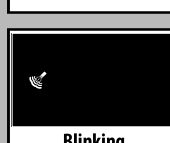


- The machine is overheated. Brew water to bring the machine to a normal temperature to brew coffee and dispense hot water.

Alarm Signals



- Return the hot water / steam knob to its proper position.

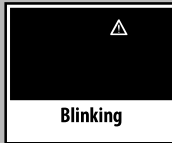


- Insert the Brew Group in the machine.
- Close the service door.



- Turn off the machine and clean the brew group thoroughly as described in the manual.
- If the error persists, contact the service centre.



- Empty the coffee grounds drawer.
- Empty the tray placed under the brew group.

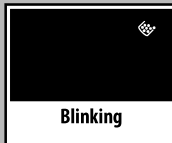

- Insert the coffee grounds drawer.



- No coffee beans in the coffee bean hopper.
- After refilling the hopper, the cycle can be restarted.



- Fill the water tank.

TROUBLESHOOTING

Machine Actions	Causes	Solutions
The machine does not turn on.	The machine is not connected to the electric network.	Connect the machine to the electrical network.
The coffee is not hot enough.	The cups are cold.	Preheat the cups with hot water.
No hot water or steam is dispensed.	The hole of the steam wand is clogged.	Clean the hole of the steam wand using a pin. Make sure that the machine is turned off and has cooled before performing this operation.
	Pannarello is dirty (if supplied).	Clean the Pannarello.
The coffee has not enough crema. (See note)	The coffee blend is unsuitable, the coffee is not freshly roasted or the grind is too coarse.	Change coffee blend or adjust the grind as explained in section "Coffee Grinder Adjustment".
The machine takes a long time to warm up or the amount of water dispensed from the wand is too little.	The machine circuit is clogged by limescale.	Descale the machine.
The brew group cannot be removed.	The brew group is out of place.	Turn on the machine. Close the service door. The brew group automatically returns to the correct position.
	The coffee grounds drawer is inserted.	Remove the coffee grounds drawer before removing the brew group.
The machine grinds the coffee beans but no coffee comes out. (See note)	There is no water.	Fill the water tank and prime the circuit (section "Using the Machine for the First Time").
	The brew group is dirty.	Clean the brew group ("Brew Group" section).
	The circuit is not primed.	Prime the circuit (section "Using the Machine for the First Time").
	Rare event that occurs when the machine is automatically adjusting the dose.	Brew a few coffees as described in section "Gaggia Adapting System".
	The dispensing spout is dirty.	Clean the dispensing spout.
The coffee is too weak. (See note)	Rare event that occurs when the machine is automatically adjusting the dose.	Brew a few coffees as described in section "Gaggia Adapting System".
Coffee is brewed slowly. (See note)	The coffee grind is too fine.	Change coffee blend or adjust the grind as explained in section "Coffee Grinder Adjustment".
	The circuit is not primed.	Prime the circuit (section "Using the Machine for the First Time").
	The brew group is dirty.	Clean the brew group ("Brew Group" section).
Coffee leaks out of the dispensing spout.	The dispensing spout is clogged.	Clean the dispensing spout and its holes.

Note: These problems can be considered normal if the coffee blend has been changed or the machine is being installed for the first time. In this case wait until the machine performs a self-adjusting operation as described in section "Gaggia Adapting System".

Please contact the customer service for any problems not covered in the above table or when the suggested solutions do not solve the problem.